




HIRSCHMANN

A Belden Company

Montagehinweise RSR20/RSR30 Wandmontageplatte

Mounting instructions RSR20/RSR30 wall mounting plate

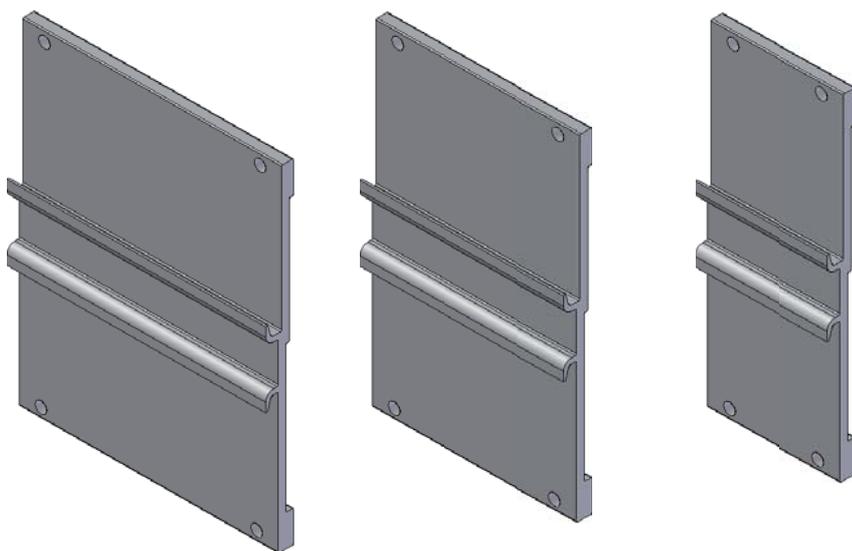

RSR20/RSR30 Wandmontageplatte (120mm, 90 mm und 60 mm Breite)
RSR20/RSR30 wall mounting plate (width 120mm, 90 mm and 60 mm)

Die RSR20/RSR30 Wandmontageplatte ermöglicht Ihnen die Montage Ihres RSR20/RSR30-Gerätes an der Wand. Der RSR20/RSR30 wird auf die Wandmontageplatte aufgerastet. Diese wird mit 4 Schrauben an der Wand befestigt.

Eine ausführliche Beschreibung der Montage und Inbetriebnahme Ihres RSR20/RSR30 entnehmen Sie dem "Anwender-Handbuch Installation - Industrial ETHERNET Switch Rail Switch Rugged - RSR20/RSR30 Familie" (im Lieferumfang des RSR20/RSR30 enthalten).

The RSR20/RSR30 wall mounting plate enables you to mount your RSR20/RSR30 device onto the wall. The RSR20/RSR30 is snapped onto the wall mounting plate, which is tightened onto the wall with 4 screws.

For detailed information about the assembly and the startup procedure of your RSR20/RSR30, refer to the "User Manual Installation - Industrial ETHERNET Switch Rail Switch Rugged - RSR20/RSR30 Family" (included in the scope of delivery of the RSR20/RSR30).



039713001010508000

Hirschmann. Simply a good Connection.

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts ist nicht gestattet, soweit nicht ausdrücklich zugestanden. Zuwiderhandlungen verpflichten zu Schadensersatz. Alle Rechte vorbehalten, insbesondere für den Fall der Patenterteilung oder GM-Eintragung.

Copyright
© Hirschmann
Automation and Control GmbH 2008
All Rights Reserved

Bestimmungsgemäßer Gebrauch

Bitte beachten Sie folgendes:

Das Gerät darf nur für die im Katalog und in der technischen Beschreibung vorgesehenen Einsatzfälle und nur in Verbindung mit von Hirschmann empfohlenen bzw. zugelassenen Fremdgeräten und -komponenten verwendet werden. Der einwandfreie und sichere Betrieb des Produktes setzt sachgemäßen Transport, sachgemäße Lagerung, Aufstellung und Montage sowie sorgfältige Bedienung und Instandhaltung voraus.



Recycling Hinweis:

Dieses Produkt ist nach seiner Verwendung entsprechend den aktuellen Entsorgungsvorschriften Ihres Landkreises/Landes/Staates als Elektronikschrott einer geordneten Entsorgung zuzuführen.

1 AUSPACKEN, PRÜFEN

- Überprüfen Sie, ob das Paket komplett ausgeliefert wurde (s. Lieferumfang).
- Überprüfen Sie die Einzelteile auf Transportschäden.
-  Nehmen Sie nur unbeschädigte Teile in Betrieb!

2 MONTAGE

- Sie benötigen für die Montage (nicht im Lieferumfang enthalten):
 - 4 Schrauben
 - 4 Dübel, passend zu den Schrauben
 - Bohrmaschine
 - Schraubendreher
- Positionieren Sie die RSR20/RSR30 Wandmontageplatte als Bohrschablone an der gewünschten Stelle an der Wand und zeichnen Sie die vier Bohrlöcher an (siehe Abb. 1).

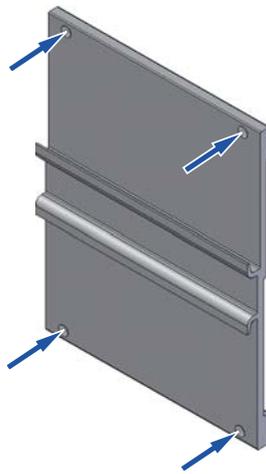


Abb. 1: Bohrlöcher anzeichnen

- Bohren Sie die 4 Löcher und setzen Sie die 4 Dübel in die Bohrlöcher.
- Montieren Sie das RSR20/RSR30-Gerät wie in der Abb. 2 gezeigt an der Wandmontageplatte:
Hängen Sie die obere Rastführung des Gerätes in die Schiene ein und drücken Sie es nach unten gegen die Schiene bis zum Einrasten.
- Schrauben Sie die Wandmontageplatte incl. Gerät mit den 4 Schrauben an die Wand (siehe Abb. 2).



Abb. 2: RSR20/RSR30-Gerät auf Wandmontageplatte aufrasten, mit 4 Schrauben an der Wand festschrauben

3 DEMONTAGE

Um das Gerät von der Wandmontageplatte zu demontieren,

- lösen Sie die beiden unteren Schrauben am Gerät (siehe Abb. 1 bzw. 2).
- fahren Sie mit einem Schraubendreher waagrecht unterhalb des Gehäuses in den Verriegelungsschieber, ziehen diesen - ohne den Schraubendreher zu kippen - nach unten und klappen das Gerät nach oben (siehe Abb.3).

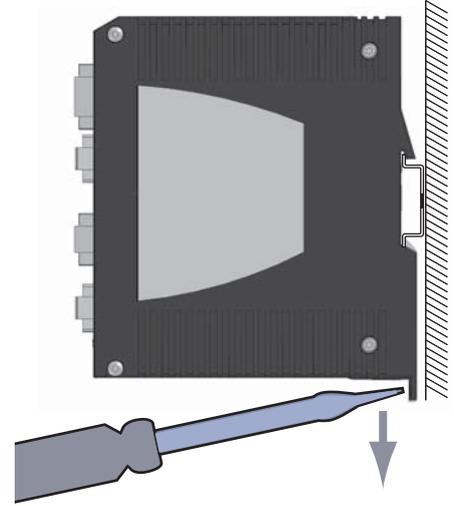


Abb. 3: Demontage des RSR20/RSR30-Gerätes von der Schiene (Wandmontageplatte)

4 WEITERE UNTERSTÜTZUNG

Bei technischen Fragen wenden Sie sich bitte an den Hirschmann Vertragspartner in Ihrer Nähe oder direkt an Hirschmann. Die Adressen unserer Vertragspartner finden Sie

im Internet (<http://www.hirschmann-ac.de>). Darüber hinaus steht Ihnen unsere Hotline zur Verfügung:
Tel. +49 1805 14-1538
Fax +49 7127 14-1551

Antworten zu häufig gestellten Fragen finden Sie auf den Produktseiten von Hirschmann: www.hirschmann-ac.de. Im Geschäftsbereich Automation and Control gibt es unter „SERVICE“ die Rubrik FAQ.

Das aktuelle Schulungsangebot zu Technologie und Produkten finden Sie unter www.hicomcenter.com.

3. TECHNISCHE DATEN

Allgemeine Daten

RSR20/RSR30-Wandmontageplatte zur Befestigung des RSR20/RSR30-Gerätes an der Wand

Abmessungen B x H x T

Wandmontageplatte, 120 mm Breite	120 x 145 x 13 mm
Wandmontageplatte, 90 mm Breite	90 x 145 x 13 mm
Wandmontageplatte, 60 mm Breite	60 x 145 x 13 mm

Masse

Wandmontageplatte, 120 mm Breite	ca. 210 g
Wandmontageplatte, 90 mm Breite	ca. 150 g
Wandmontageplatte, 60 mm Breite	ca. 90 g

Lieferumfang

incl. Montagehinweis

1 x RSR20/RSR30-Wandmontageplatte

Bestellnummer

Wandmontageplatte, 120 mm Breite
Wandmontageplatte, 90 mm Breite
Wandmontageplatte, 60 mm Breite

943 971-001
943 971-002
943 971-003



Permission is not given for the circulation or reproduction of this document, its use or the passing on of its contents unless granted expressly. Contravention renders the perpetrator liable for compensation for damages. All rights reserved, in particular in the case of patent grant or registration of a utility or design.

Copyright
© Hirschmann
Automation and Control GmbH 2008
All Rights Reserved

Certified usage

Please observe the following:

The device may only be employed for the purposes described in the catalog and technical description, and only in conjunction with external devices and components recommended or approved by Hirschmann. The product can only be operated correctly and safely if it is transported, stored, installed and assembled properly and correctly. Furthermore, it must be operated and serviced carefully.



Recycling Note:

After its use, this product has to be processed as electronic scrap and disposed of according to the prevailing waste disposal regulations of your community / district / country / state.

1 UNPACKING, CHECKING

- Check whether the package was delivered complete (see scope of delivery).
- Check the individual parts for transport damage.
- Use only undamaged parts!

2 ASSEMBLY

- For assembly you need (not included in the scope of delivery):
 - 4 screws
 - 4 screw anchors, suitable for the screws
 - Drilling machine
 - Screwdriver
- Place the RSR20/RSR30 wall mounting plate as a drilling template on the wall, due to your requirements, and mark the four drill holes (see Fig. 1).

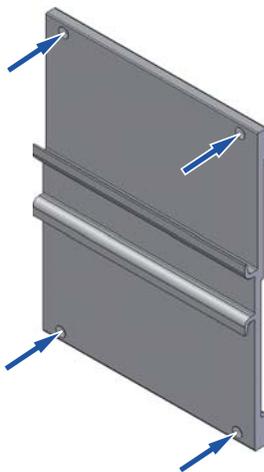


Fig. 1: Mark the drill holes

- Drill the 4 holes and insert the 4 screw anchors into the holes.
- Mount the RSR20/RSR30 device on the wall mounting plate as shown in Fig. 2: Attach the upper snap-in guide of the device into the rail and press it down against the rail until it snaps into place.
- Screw the wall mounting plate incl. the device tightly onto the wall with 4 screws (see Fig. 2).



Fig. 2: Snap the RSR20/RSR30 device onto the wall mounting plate, screw it tightly onto the wall with 4 screws

3 DISASSEMBLY

To remove the device from the wall mounting plate,

- unscrew the two lower screws on the device (see Fig. 1 or 2).
- insert a screwdriver horizontally under the housing into the locking slide, pull it (without tipping the screwdriver) downwards and lift the device upwards (see Fig.3).

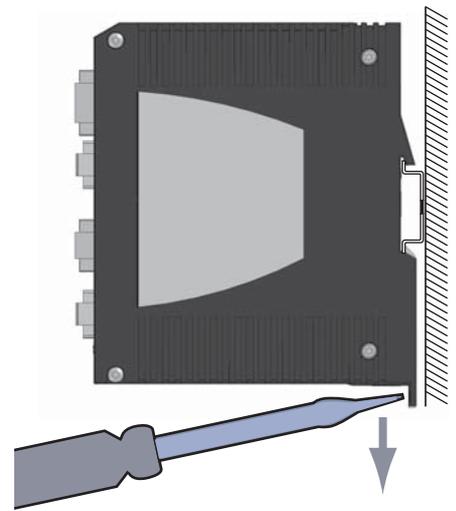


Fig. 3: Removing the RSR20/RSR30 device from the rail (wall mounting plate)

4 FURTHER SUPPORT

In the event of technical queries, please talk to the Hirschmann contract partner responsible for looking after your account or directly to the Hirschmann office. You can find the addresses of our contract partners

– on the Internet
(<http://www.hirschmann-ac.de>)

Our support line is also at your disposal:
Tel. +49 1805 14-1538
Fax +49 7127 14-1551

Answers to Frequently Asked Questions can be found on the Hirschmann product internet sites on www.hirschmann-ac.de. The FAQs are located under „Service“ in the Automation and Control section. www.hicomcenter.com gives you an up-to-date overview of training courses about technology and products.

3. TECHNICAL DATA

General data

RSR20/RSR30 wall mounting plate for mounting the RSR20/RSR30 device onto the wall

Dimensions W x H x D

Wall mounting plate, width 120 mm	120 x 145 x 13 mm
Wall mounting plate, width 90 mm	90 x 145 x 13 mm
Wall mounting plate, width 60 mm	60 x 145 x 13 mm

Mass

Wall mounting plate, width 120 mm	approx. 210 g
Wall mounting plate, width 90 mm	approx. 150 g
Wall mounting plate, width 60 mm	approx. 90 g

Scope of delivery

incl. mounting instructions	1 x RSR20/RSR30 wall mounting plate
-----------------------------	-------------------------------------

Order number

Wall mounting plate, width 120 mm	943 971-001
Wall mounting plate, width 90 mm	943 971-002
Wall mounting plate, width 60 mm	943 971-003

Hirschmann Automation and Control GmbH
Stuttgarter Straße 45-51
D-72654 Neckartenzlingen
Germany
Tel.: ++49 1805 14-1538
Fax: ++49 7127 14-1551
E-Mail: hac-support@hirschmann.de
Internet: <http://www.hirschmann-ac.com>

Printed in Germany
Subject to alterations